



# ***UNIVERGE SV9500***

---

***DT830/DT430/DT410***

**USER'S GUIDE**

**NWD-172904-001**

**ISSUE 3.0**

**2016 JANUARY**

## TO ORIGINATE A CALL USING SPEED CALLING (ONE-TOUCH SPEED CALLING KEYS)

**DT830** **DT430/410**

STEP 1: Press the desired **One-Touch Speed Calling** key, or press **Speaker** key and **One-Touch Speed Calling** key.

### To Program

(Available only on the terminal with **One-Touch Speed Calling** key.)

STEP 2: Press **Feature** key.

STEP 3: Press the desired **One-Touch Speed Calling** key.

STEP 4: Enter the desired telephone number or feature access code on the keypad.  
Display indicates the digits dialed.

STEP 5: Press **Feature** key again to save the number.

<b>SPEED SET</b>		
1:25 PM MON 11 MAY 2015		
Mic	NoDist	>>>

### To Verify

STEP 2: Press **Feature** key.

STEP 3: Press the desired **One-Touch Speed Calling** key.

STEP 4: Display indicates digits programmed.

**Note:** To program a hook switch for transfer or feature activation, press **Recall** key as first digit. (! displays on LCD.)

**Note:** To program a pause, press the **Recall** key as any digit other than the first digit. (– displays on LCD.)

**Note:** To program a Voice Call, press **Transfer** key after dialing station number. (**Voice** displays on LCD.)

**Note:** The **One-Touch Speed Calling** key for feature access:

The **One-Touch Speed Calling** key may be used as a feature key by storing the feature access code. The features may be programmed on a system basis by the Telephony Server administrator. Access codes may be stored in conjunction with telephone numbers. For example, you can program one button to transfer to a certain extension.

### LCD Indication of DESI-less screen

STEP 1: Press the desired **One-Touch Speed Calling** key and originate a call.  
Registered name will be displayed as follows.  
For the key to which no name information is registered, the character “SPD” is displayed.

When a registering Name Information of One-touch Speed Calling, you can use uppercase alphabetic, uppercase European or lowercase European characters.

**Note:** For details of available characters, see TO REGISTER NAME ON ONE-TOUCH SPEED CALLING KEY.

## TO REGISTER NAME ON ONE-TOUCH SPEED CALLING KEY

**DT830 DT430**

(Available for DESI-less screen terminal.)

STEP 1: Press the **Name** soft key.

```

Push Speed Calling Key
1:25 PM MON 11 MAY 2015
Name >>>
    
```

STEP 2: Press the desired **One-Touch Speed Calling** key.

STEP 3: Enter desired name on the keypad.  
Display indicates the name entered.

```

NEC BNET
^
Set Cnl Clr >>>
    
```

STEP 4: Press the **Set** soft key to save the name.

```

1:25 PM MON 11 MAY 2015
Name >>>
    
```

**Note:** To delete the entry, press the **Delete** or the **BK** key and delete each one character.

**Note:** To delete the whole setting, press the **Clr** key and back to an idle state.

## To Register Speed Calling Number On DESI-less Screen

STEP 1: Follow the procedure of **To program** in **To Originate a Call Using Speed Calling (One-Touch Speed Calling Keys)**.

- Available characters for One-Touch Speed Calling keys.

### ALPHABETIC CHARACTER

DIGIT KEY	1	2	3	4	5	6	7	8	9	0	*	#
CHARACTER	1	A	D	G	J	M	P	T	W	0	*	#
		B	E	H	K	N	Q	U	X		@	&
		C	F	I	L	O	R	V	Y		.	(
		a	d	g	j	m	S	t	Z		,	)
		b	e	h	k	n	p	u	w		'	[
		c	f	i	l	o	q	v	x		:	]
		2	3	4	5	6	r	8	y		;	!
							s		z		-	?
							7		9		/	

### EUROPEAN CHARACTER (UPPERCASE)

DIGIT KEY	1	2	3	4	5	6	7	8	9	0	*	#
CHARACTER	.	A	D	G	J	M	P	T	W	0	*	#
	,	B	E	H	K	N	Q	U	X			
	:	C	F	I	L	O	R	V	Y			
	!	À	É	Ì	5	Ñ	S	Ù	Z			
	?	Á	Ê	Í		Ö	ß	Ú	9			
	-	Ã	Ë	Î		Ó	7	Û				
	+	Ä	Ë	Ï		Ô		Ü				
	%	Ä	3	4		Ö		8				
	&	Å				Ö						
	/	Æ				Œ						
	(	Ç				Ø						
	)	2				6						
	=											
	ç											
ï												
1												

**Note:** The shaded area indicates the characters which cannot be entered.

### EUROPEAN CHARACTER (LOWERCASE)

DIGIT KEY	1	2	3	4	5	6	7	8	9	0	*	#
CHARACTER	.	a	d	g	j	m	p	t	w	0	*	#
	,	b	e	h	k	n	q	u	x			
	:	c	f	i	l	o	r	v	y			
	!	à	è	ì	5	ñ	s	ù	z			
	?	á	é	í		ò	β	ú	9			
	-	â	ê	î		ó	7	û				
	+	ã	ë	ï		ô		ü				
	%	ä	3	4		ö		8				
	&	å				ö						
	/	æ				œ						
	(	ç				ø						
	)	2				6						
	=											
	ç											
ï												
1												

**Note:** The shaded area indicates the characters which cannot be entered.